

HUSQVARNA - КАТАЛОГ ЗАПЧАСТЕЙ

LAWN MOWERS: CONSUMER WALK-BEHINDS: HUSQVARNA LC 140SP


Список запчастей

СПИСОК ЗАПЧАСТЕЙ

LAWN MOWERS: CONSUMER WALK-
BEHINDS

HUSQVARNA LC 140SP


B LC 140SP
CHASSIS

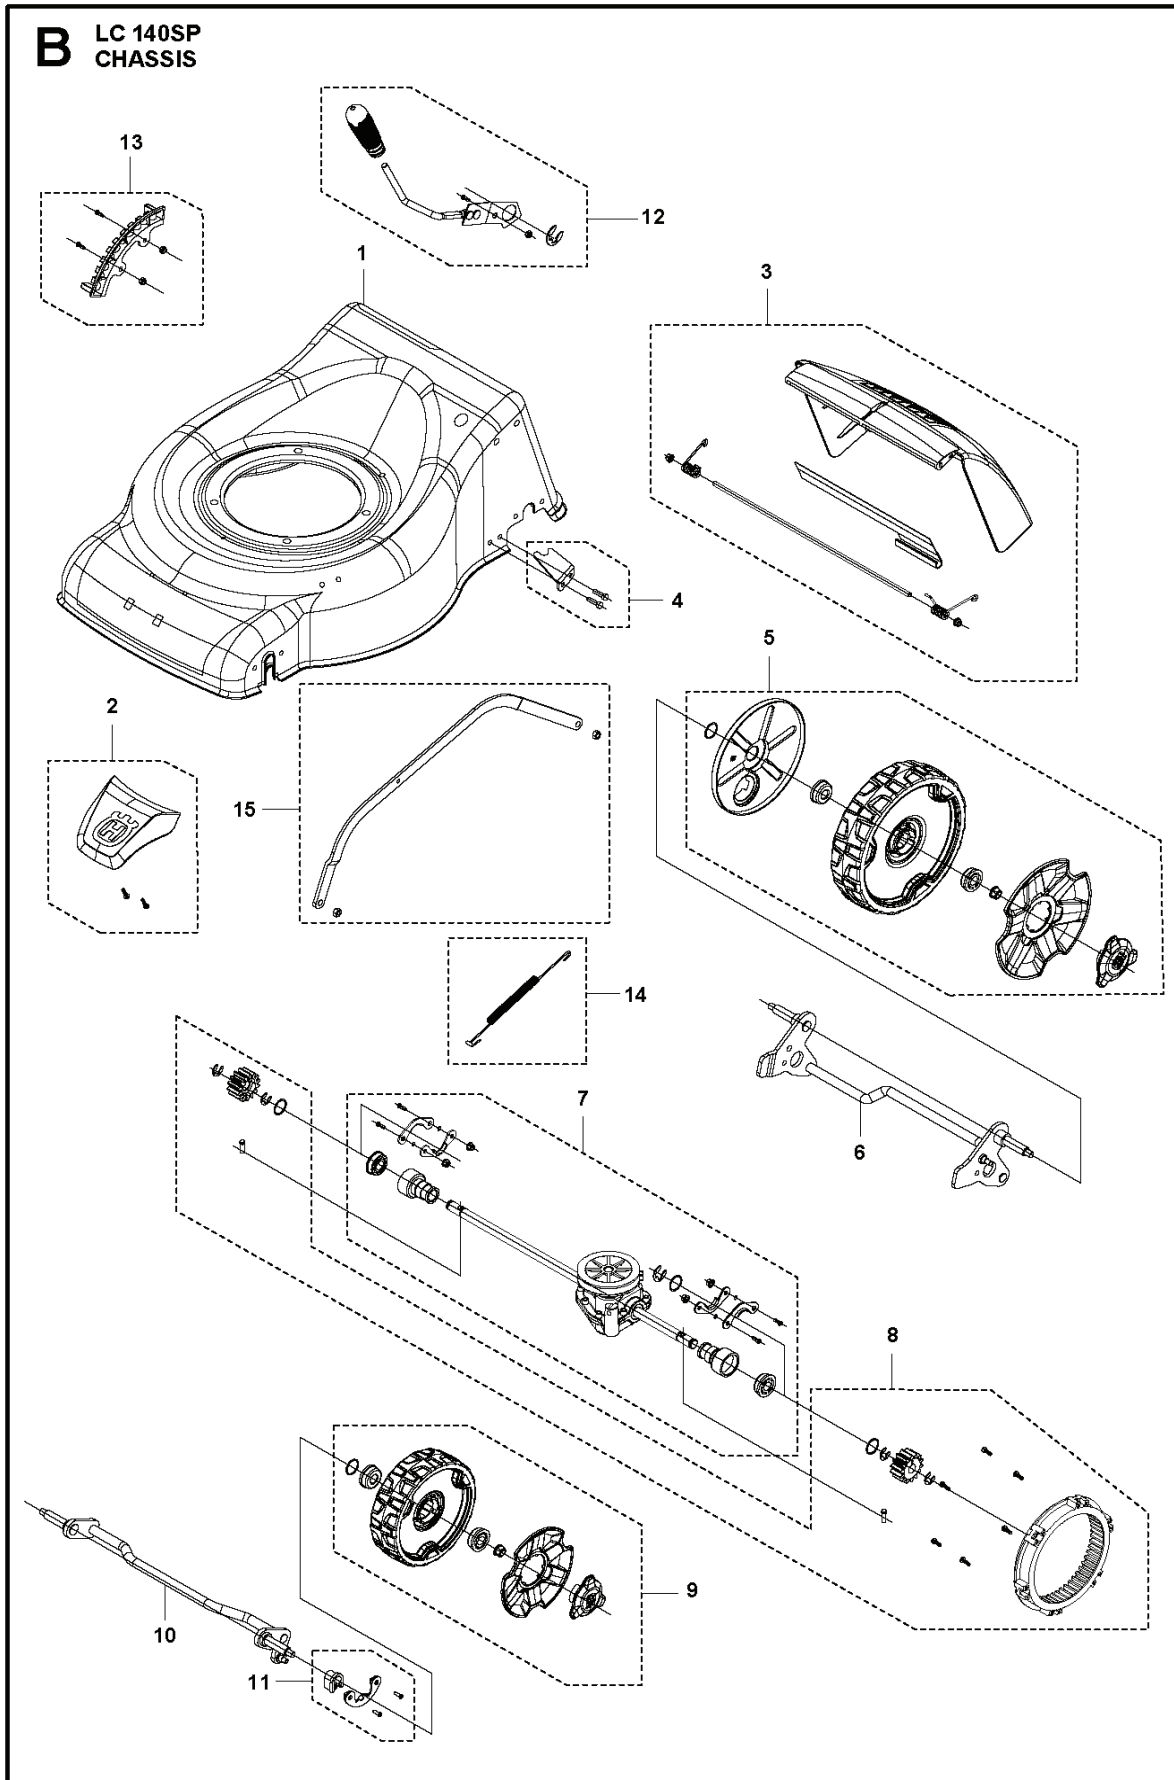

LAWN MOWERS: CONSUMER WALK-BEHINDS

РХМ_REF	РХМ_PARTNO	ОПИСАНИЕ	РХМ_REMARK	КОЛ-ВО
1	599349369	Крышка в сборе	CHASSIS	1
2	599349371	COVER KIT	FRONT COVER	1
3	599349373	FLAP	REAR DOOR	1
4	599349409	PLATE KIT	(blank)	1
5	599349423	Колесо	REAR WHEEL	1
6	599349386	AXLE	WHEEL AXLE	1
7	599349420	TRANSMISSION KIT	REAR TRANSMISSION	1
8	599349396	Набор шестернь	WHEEL DRIVE	2
9	599349367	Колесо	FRONT WHEEL	1
10	599349387	AXLE	WHEEL AXLE	2
11	599349382	AXLE	FRONT AXLE FIXING	1
12	599349399	HANDLE KIT	HEIGHT ADJUSTMENT HANDLE	1
13	599349363	PLATE KIT	HEIGHT ADJUSTMENT PLATE	1
14	599349366	Пружина	HEIGHT ADJUSTMENT SPRING	1
15	599349364	ROD	HEIGHT ADJUSTMENT ROD	1


D LC 140SP
GRASS HANDLING

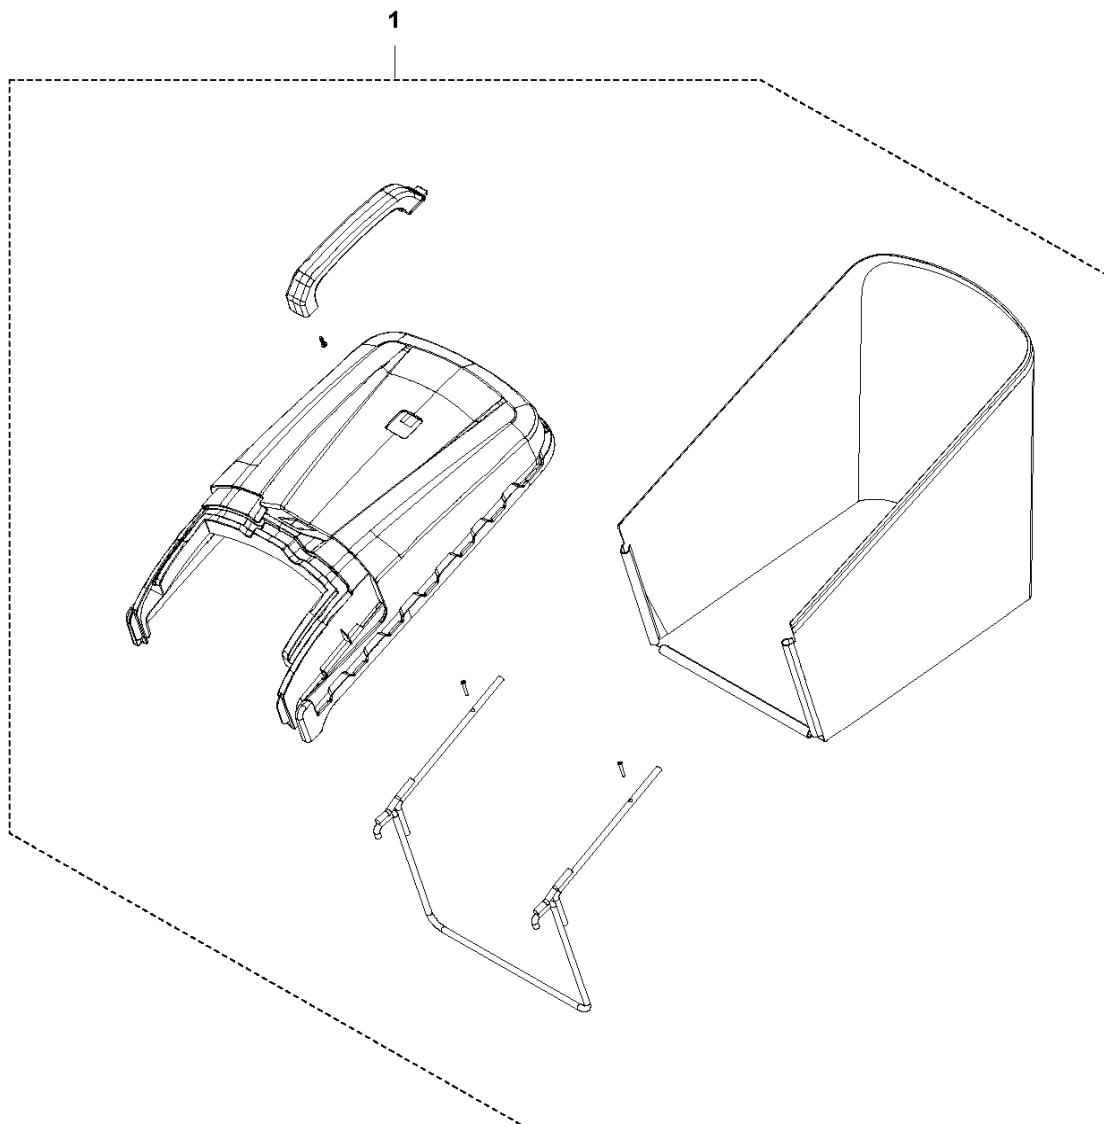

LAWN MOWERS: CONSUMER WALK-BEHINDS

РХМ_REF	РХМ_ PARTNO	ОПИСАНИЕ	РХМ_REMARK	КОЛ- ВО
1	599349378	GRASS BAG ASSY	GRASS BAG KIT	1


C LC 140SP
ENGINE

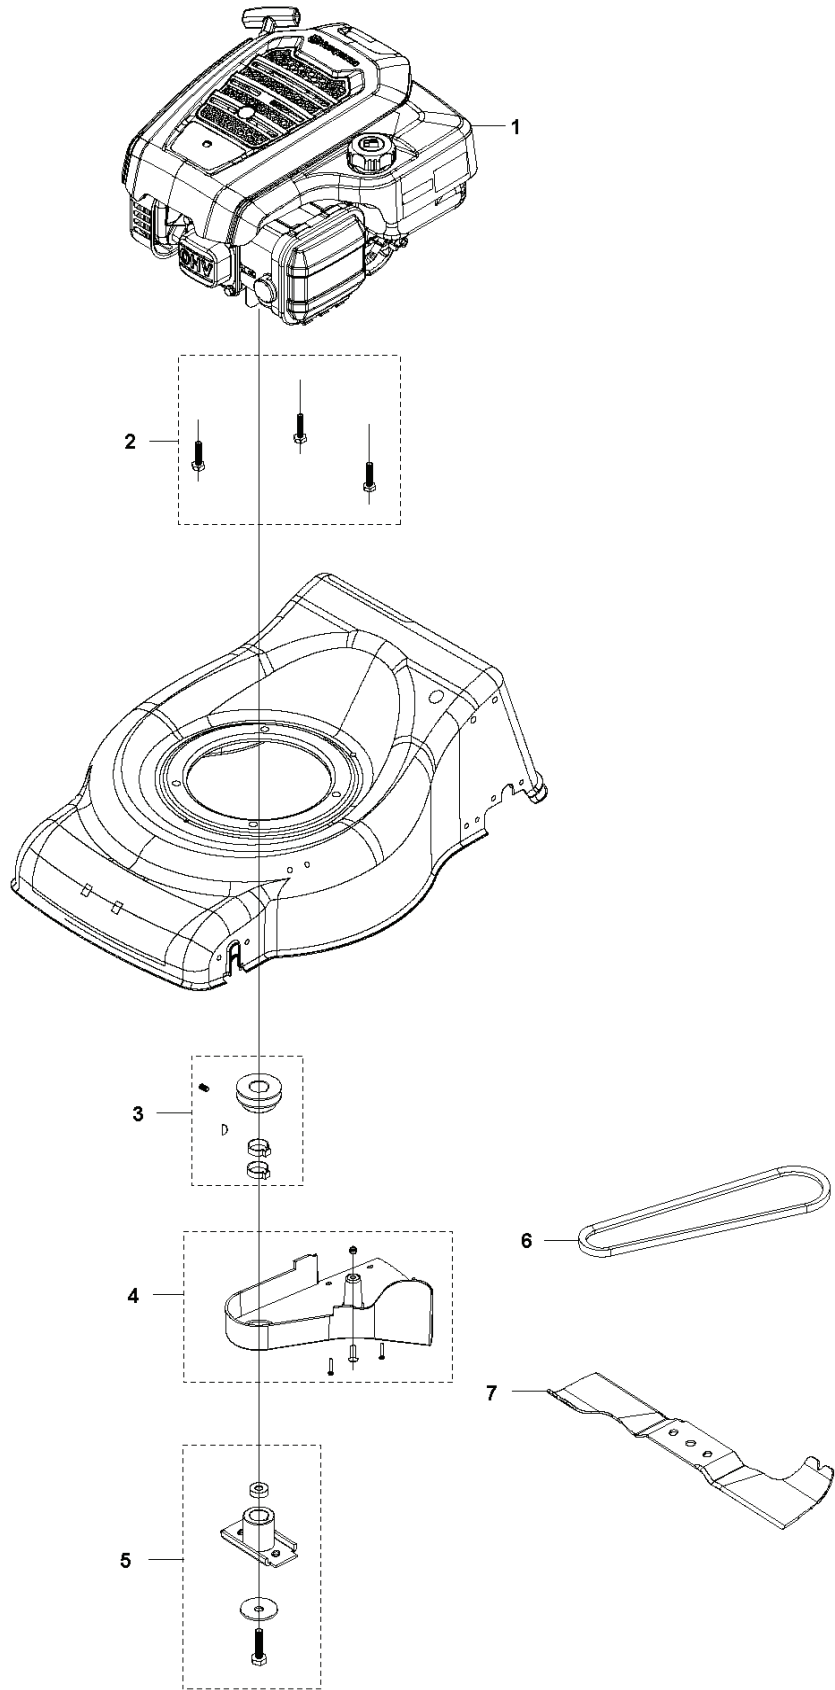

LAWN MOWERS: CONSUMER WALK-BEHINDS

PXM_REF	PXM_PARTNO	ОПИСАНИЕ	PXM_REMARK	КОЛ-ВО
1	TBD	TBD		1
2	599349407	INSTALLATION KIT	BOLTS AND NUTS	1
3	599349413	Шкив	DRIVE PULLEY	1
4	599349376	КРЫШКА	BELT COVER	1
5	529737101	BLADE SUPPORT	BLADE ADAPTER	1
6	599349389	Ремень приводной 272К 14"	BELT	1
7	599349374	Нож для обрез.веток 80 см		1

B LC 140SP
HANDLE

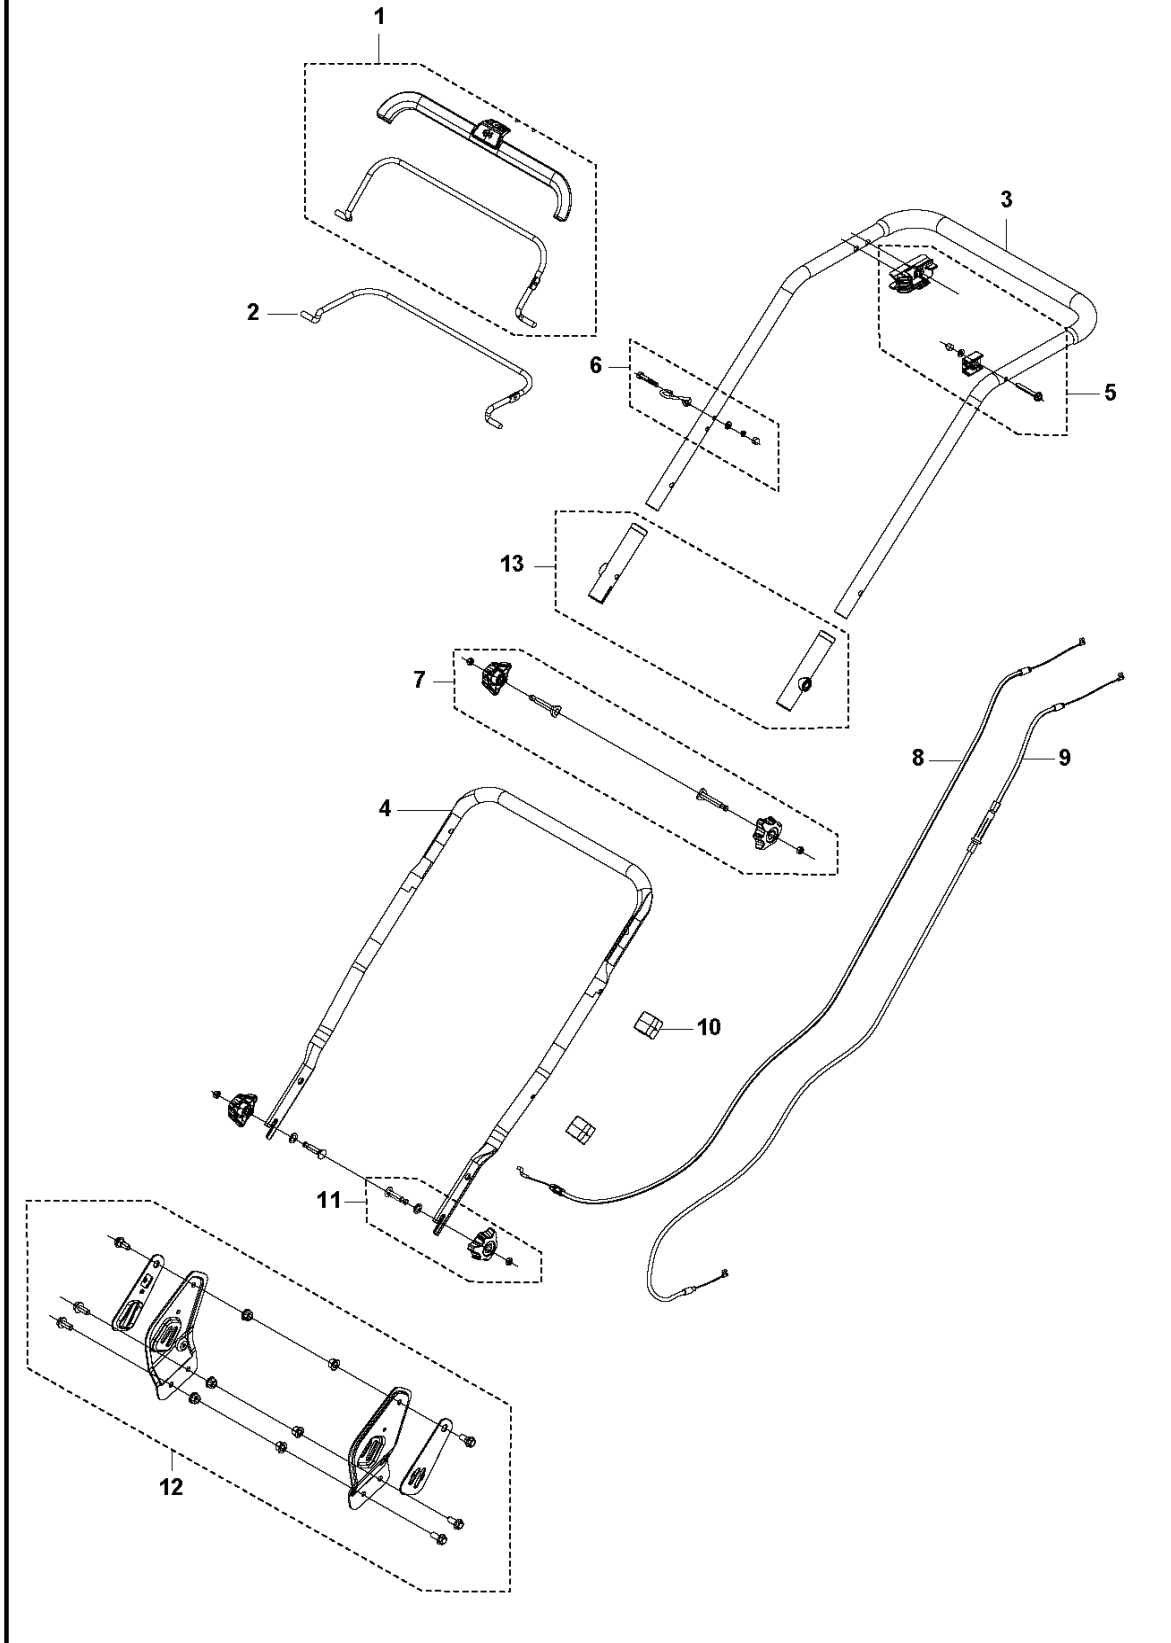

LAWN MOWERS: CONSUMER WALK-BEHINDS

PXM_REF	PXM_PARTNO	ОПИСАНИЕ	PXM_REMARK	КОЛ-ВО
1	599349362	BAIL ARM ASSY	BAIL ARM	1
2	599349415	ROD	DRIVE ROD	1
3	599349403	HANDLE KIT	HANDLE AND SHEATH	1
4	599349397	Передняя ручка 371K	LOWER HANDLE	1
5	599349361	BAIL ARM ASSY	BAIL ARM	1
6	529853401	HANDLE KIT	HANDLE	1
7	599349360	KNOB ASSY	KNOB	1
8	599349391	Провод	FLAMEOUT CABLE	1
9	599349393	CABLE ASSY 2035	DRIVE CABLE ASSY	1
10	599349379	CLAMP	CABLE CLIP	1
11	529596001	KNOB ASSY	KNOB	1
12	599349380	SUPPORT KIT	HANDLE BRACKET	1
13	599349418	Втулка	ANTI FRICTION SLEEVE	1