


# T435


**Spare parts**  
**Ersatzteile**  
**Pièces détachées**  
**Reserve onderdelen**  
**Repuestos**  
**Reservdelar**

**A** T435  
CHAIN BRAKE

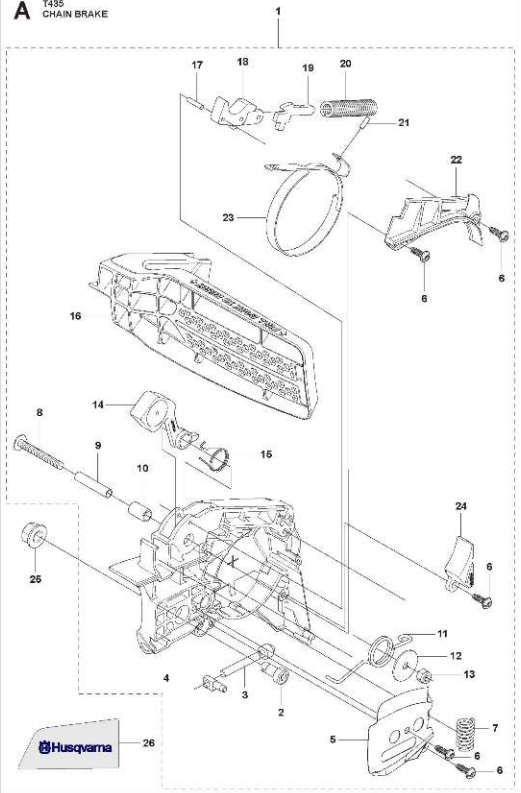


Position	Part nr.	Quantity	Description	Kit
1	522 01 38-01	1	Brake assy	
2	516 85 38-01	1	Gear	1
3	516 95 22-01	1	Screw	1
4	516 91 81-01	1	Tension knob	1
5	522 64 33-01	1	Plate	1
6	516 82 72-01	5	Screw	1
7	522 64 32-01	1	Spring	1
8	516 96 75-01	1	Bolt	1
9	516 96 76-01	1	Spacer	1
10	516 96 78-01	1	Spacer	1
11	516 96 74-01	1	Spring	1
12	521 02 54-01	1	Washer	1
13	520 96 86-01	1	Nut	1
14	527 75 22-01	1	weight	1
15	516 98 84-01	1	Spring	1
16	522 01 57-01	1	Hand guard	1
17	516 97 67-01	1	Pin	1
18	516 97 64-01	1	Lever	1
19	516 82 56-01	1	Arm	1
20	516 82 66-01	1	Spring	1
21	521 07 54-01	1	Pin	1
22	522 01 54-01	1	Brake cover	1
23	521 80 11-01	1	Brake band	1
24	523 08 06-01	1	Guide	1
25	503 22 00-01	1	Nut	
26	522 63 52-01	1	Decal, clutch cover	

**B** T435  
CLUTCH & OIL PUMP

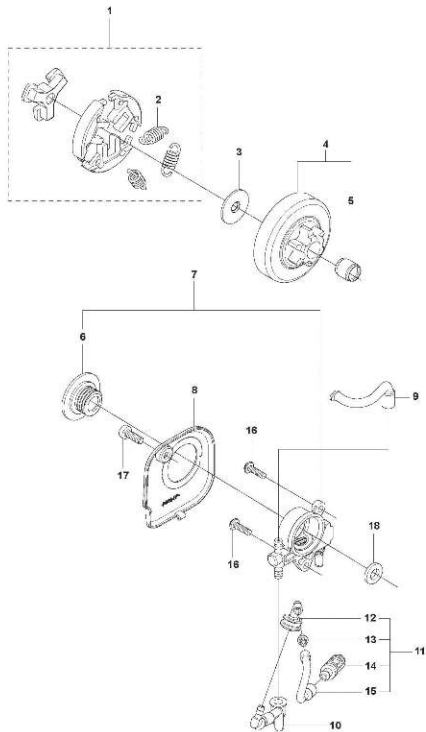


Position	Part nr.	Quantity	Description	Kit
1	521 55 74-01	1	Clutch assy	
2	521 55 75-01	3	Clutch spring	1
3	521 77 94-01	1	Plate	
4	523 08 26-01	1	Clutch drum 3/8 6T	
5	520 96 73-01	1	Bearing	4
6	505 05 31-01	1	Worm wheel	7
7	505 05 29-01	1	Oil pump assy	
8	522 00 56-01	1	Cover oil pump	
9	521 79 26-01	1	Oil hose	
10	522 64 36-01	1	Oil hose assy	
11	527 67 23-01	1	Oil filter assy	
12	527 67 21-01	1	Oil pipe	11
13	516 95 03-01	1	Joint	11
14	521 58 00-01	1	Filter	11
15	529 25 17-01	1	Oil hose	11
16	516 82 94-01	2	Screw	
17	521 51 62-01	1	Screw	
18	522 63 89-01	1	Washer	

**C** T435  
CYLINDER COVER

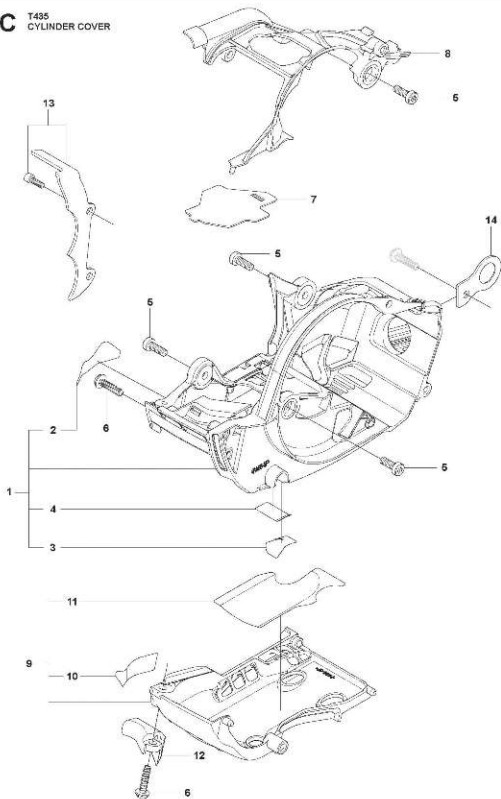

Position	Part nr.	Quantity	Description	Kit
1	522 00 11-01	1	Case Comp	
2	527 66 79-01	1	Tape	1
3	527 68 26-01	1	Tape	1
4	527 68 40-01	1	Tape	1
5	521 51 62-01	4	Bolt	
6	521 51 80-01	2	Screw	
7	522 64 12-01	1	Gasket	
8	522 00 12-01	1	Cover, top	
9	577 10 49-01	1	Case Comp (cover bottom)	
10	527 67 72-01	1	Tape	6
11	577 10 37-01	1	Tape	6
12	522 01 21-01	1	Chain catcher	
13	522 63 47-01	1	Spike kit	
14	522 00 16-01	1	Rope eyelet	


**D** T435  
CYLINDER & PISTON

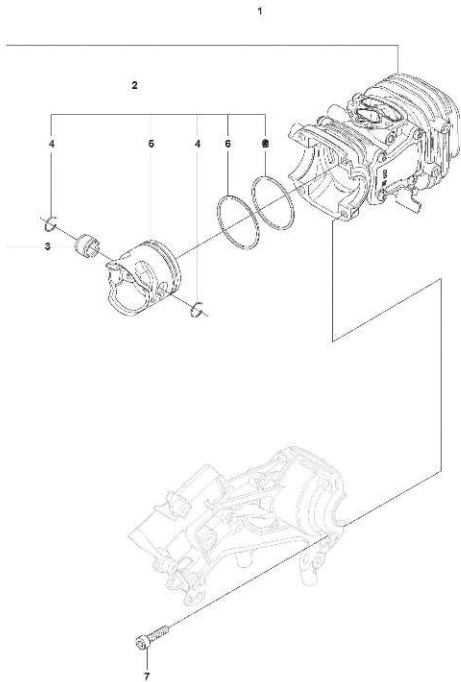





Position	Part nr.	Quantity	Description	Kit
1	523 08 43-01	1	Cylinder, compl.	
2	523 08 42-01	1	Piston, compl.	1
3	505 29 73-01	1	Needle bearing	1
4	516 28 30-01	2	Ring	2,1
5	522 64 25-01	1	Piston	2,1
6	522 64 26-01	2	Piston ring	2,1
7	521 34 64-01	4	Bolt	

**E** T435  
CRANK SHAFT

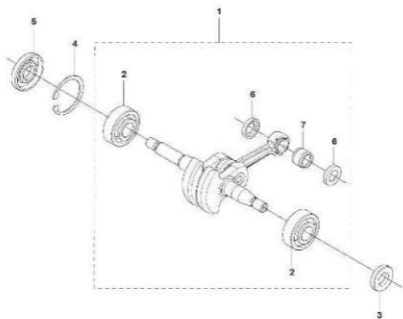


Position	Part nr.	Quantity	Description	Kit
1	523 34 03-01	1	Crankshaft comp.	
2	522 63 90-01	2	Crankshaft bearing	1
3	522 63 91-01	1	Oil seal	
4	516 12 58-01	1	Ring	
5	522 63 92-01	1	Seal	
6	516 96 57-01	2	Washer	1
7	505 29 73-01	1	Needle bearing	1

**F** T435  
MUFFLER

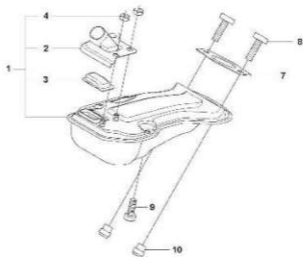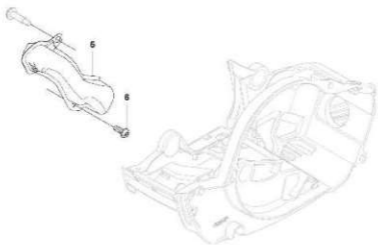


Position	Part nr.	Quantity	Description	Kit
1	577 74 20-01	1	Muffler	
2	574 38 14-01	1	Muffler guide	1
3	527 68 26-01	1	Arrester	1
4	510 48 58-01	2	Nut	1
5	522 00 45-01	1	Exhaust pipe	
6	516 80 88-01	1	Screw	
7	521 79 20-01	1	Gasket	
8	522 63 88-01	2	Bolt	
9	521 51 82-01	2	Screw	
10	516 96 09-01	2	Nut	

**G** T435  
CARBURETOR & AIR FILTER

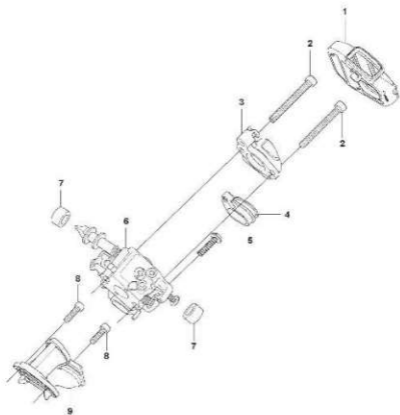

Position	Part nr.	Quantity	Description	Kit
1	527 67 47-01	1	Airfilter	
2	522 63 87-01	2	Bolt	
3	527 67 45-01	1	manifold	
4	527 67 51-01	1	Seal	
5	521 51 81-01	1	Screw	
6	522 00 76-01	1	Carburetor	
7	516 82 86-01	2	Seal	
8	522 63 85-01	2	Bolt	
9	573 95 44-01	1	Inlet	


**H** T435  
CRANKCASE

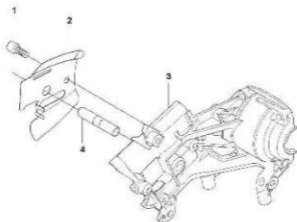



Position	Part nr.	Quantity	Description	Kit
1	521 79 99-01	1	Screw	
2	522 01 20-01	1	Oil plate	
3	527 66 56-01	1	Crankcase	
4	516 73 80-01	1	Bar stud	

**J** T435  
FUEL TANK

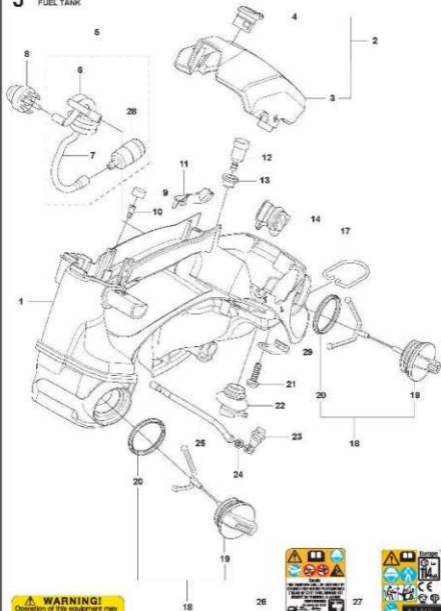


**WARNING!**  
Operation of this equipment may create sparks that can start fires around dry vegetation.  
A spark arrester may be required.  
The operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.




Position	Part nr.	Quantity	Description	Kit
1	522 01 64-01	1	Housing	
2	522 01 77-01	1	Filter cover compl.	
3	522 01 76-01	1	Filter cover	2
4	522 01 79-01	1	Knob	2
5	522 64 76-01	1	Fuel hose assy	
6	522 64 77-01	1	Grommet	5
7	522 63 95-01	1	Fuel hose	5
8	516 97 28-01	1	Purge	
9	516 94 81-01	1	Seal	
10	516 96 19-01	1	Valve	
11	522 01 76-01	1	Bracket	
12	516 96 52-01	1	Breather	
13	520 99 61-01	1	Grommet	
14	522 00 88-01	1	Guide, carb	
16	523 07 14-01	1	Decal, warning	
17	522 01 94-01	1	Eyelet	
18	574 51 04-01	2	Fuel cap compl.	
19	522 01 83-01	2	Fuel cap	18
20	574 51 06-01	2	Seal	18
21	521 51 80-01	1	Screw	
22	522 64 71-01	1	Pipe	
23	522 64 78-01	1	Hose connector	
24	516 95 03-01	1	Joint	
25	522 63 94-01	1	Hose	
26	522 63 53-01	1	Decal, warning US-CAN	
27	522 63 54-01	1	Decal, warning EU-ROW	
28	503 44 32-01	1	Fuel filter	5
29	522 01 93-01	1	Plate	

**K** T455  
HANDLE

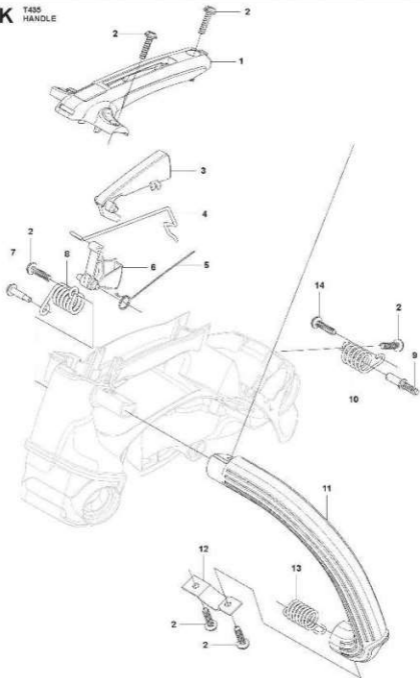


Position	Part nr.	Quantity	Description	Kit
1	522 01 74-01	1	Cover top handle	
2	521 51 81-01	6	Screw	
3	522 01 70-01	1	Throttle guard	
4	522 64 66-01	1	Rod	
5	521 07 89-01	1	Spring	
6	522 01 71-01	1	Trigger	
7	522 63 86-01	1	Screw	
8	522 64 22-01	1	AV Spring	
9	516 94 95-01	1	Bolt	
10	522 64 24-01	1	AV Spring	
11	522 01 91-01	1	Front handle	
12	521 55 72-01	1	Limiter	
13	522 64 23-01	1	AV Spring	
14	521 51 80-01	1	Screw	

**M** T435  
IGNITION SYSTEM

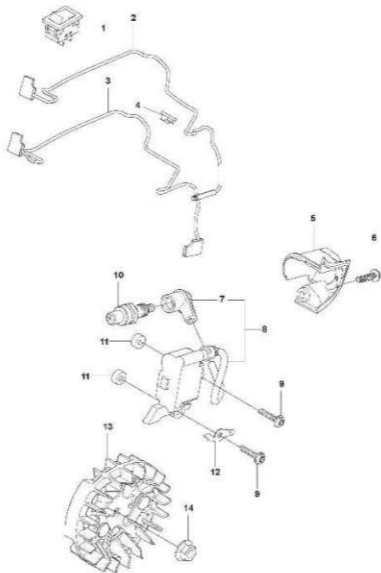

Position	Part nr.	Quantity	Description	Kit
1	576 26 11-01	1	Stop switch	
2	522 64 45-01	1	Cable	
3	522 64 46-01	1	Cable, earth	
4	522 64 43-01	1	Grommet	
5	576 13 03-01	1	Cover, sparkplug	
6	521 51 81-01	1	Screw	
7	523 08 26-01	1	Cap	8
8	576 85 72-01	1	Ignition assy	
9	522 63 84-01	2	Bolt, torx	
10	521 23 35-01	1	Spark plug	
11	505 04 34-01	2	Spacer	
12	522 64 44-01	1	Terminal	
13	522 64 41-01	1	Flywheel	
14	516 43 74-01	1	Nut	

**N** T435  
STARTER

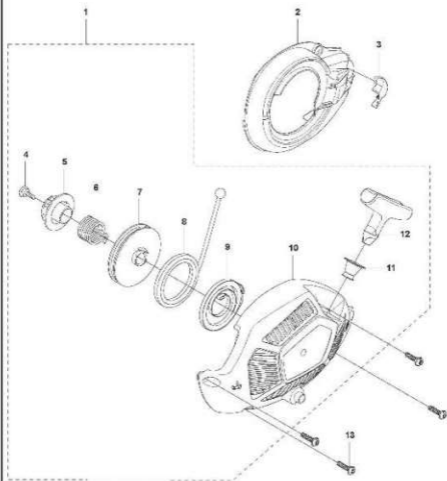




Position	Part nr.	Quantity	Description	Kit
1	522 01 25-01	1	Starter assy	
2	522 64 47-01	1	Cover flywheel	
3	527 67 38-01	1	Guide	
4	521 32 88-01	1	Screw	1
5	522 64 54-01	1	Cam, plate	1
6	522 64 53-01	1	Spring	1
7	522 64 50-01	1	Reel	1
8	522 64 51-01	1	Rope	1
9	522 64 49-01	1	Starter spring	1
10	522 01 26-01	1	Starter case	1
11	576 42 31-01	1	Rope guide	1
12	537 23 25-01	1	Starter handle	1
13	521 51 81-01	4	Screw	
14	575 86 89-01	1	Decal, startercover	

**P** T435  
CARBURETOR

1

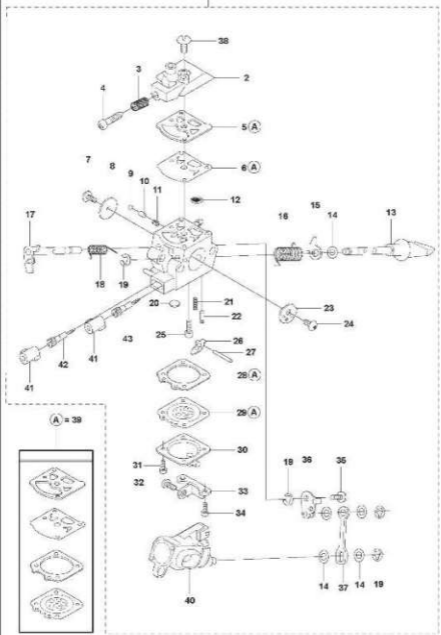

Position	Part nr.	Quantity	Description	Kit
1	522 00 76-01	1	Carburetor	
2	521 57 56-01	1	Cover	1
3	521 06 63-01	1	Spring, idle	1
4	516 77 83-01	1	Screw	1
5	520 95 48-01	1	Gasket	1,39
6	520 95 49-01	1	Diaphragm pump	1,39
7	520 75 98-01	1	Screw	1
8	520 97 86-01	1	Valve, throttle	1
9	516 93 80-01	1	Ball	1
10	516 93 59-01	1	Piston	1
11	516 92 73-01	1	Spring	1
12	520 95 70-01	1	Screen	1
13	522 63 20-01	1	Choke shaft	1
14	516 52 42-01	5	Washer	1
15	521 58 11-01	1	Lever	1
16	521 58 01-01	1	Spring choke shaft	1
17	522 64 62-01	1	Throttle shaft	1
18	516 84 39-01	1	Spring, throttle latch	1
19	516 21 70-01	4	Clip	1
20	516 34 29-01	1	Plug	1
21	516 98 00-01	1	Spring	1
22	521 08 54-01	1	Valve, inlet	1
23	516 95 69-01	1	Valve, choke	1
24	520 75 98-01	1	Screw	1
25	520 97 73-01	1	Screw	1
26	520 97 72-01	1	Lever	1
27	520 97 74-01	1	Pin	1
28	516 97 21-01	1	Gasket	1,39
29	522 64 84-01	1	Diaphragm carburetor	1,39
30	522 64 60-01	1	Cover	1
31	520 97 88-01	2	Screw kit	1
32	522 64 61-01	1	Screw	1
33	522 64 67-01	1	Bracket	1
34	522 64 56-01	2	Screw kit	1
35	520 75 98-01	1	Screw	1
36	522 64 59-01	1	Throttle link	1
37	522 64 64-01	1	Rod	1
38	520 97 63-01	1	Screw	1
39	522 64 02-01	1	Diaphragm kit	
40	522 64 63-01	1	Body air valve	1
41	521 11 69-01	2	Cap	1
42	521 58 54-01	1	Needle	1
43	516 93 58-01	1	Needle	1